
FortiAnalyzer Unit LED Indicators

LED	State	Description
Power	Green	The FortiAnalyzer unit is on.
	Off	The FortiAnalyzer unit is off.
Status	On	FortiAnalyzer unit is running normally.
10/100	On	The interface is connected at 100 Mbps.
	Off	The interface is connected at 10 Mbps.
Link Act	Flashing	Network activities on the FortiAnalyzer unit
	On	Interface connected

QuickStart Guide

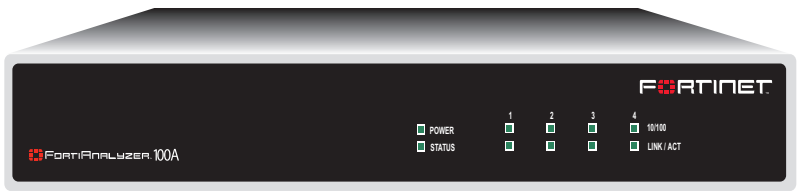


FortiAnalyzer-100A/100B

FORTINET™

© Copyright 2006 Fortinet Incorporated. All rights reserved.
Products mentioned in this document are trademarks or registered trademarks of their respective holders.
Regulatory Compliance
FCC Class A Part 15 CSA/CUS
18 September 2006

05-30003-0223-20060918

1 Checking the Package Contents

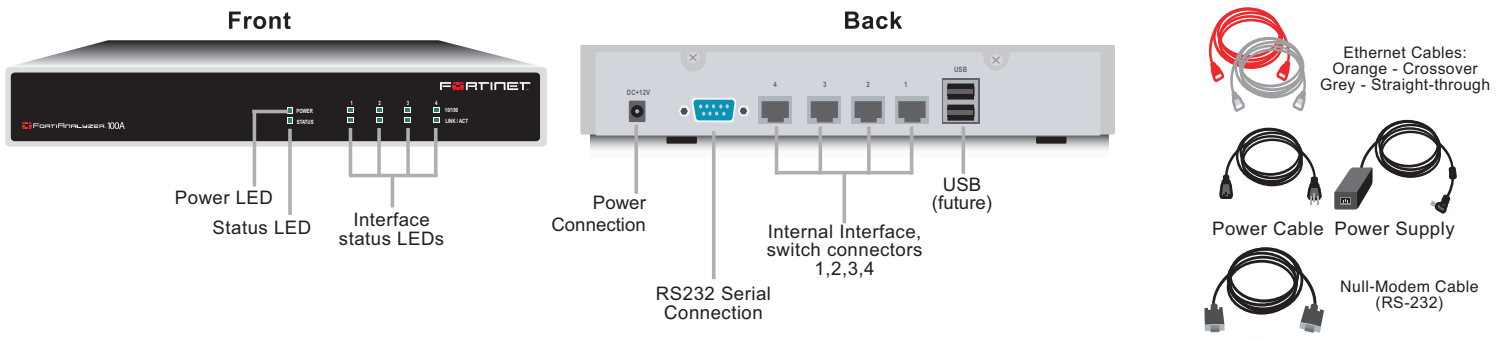


Connector	Type	Speed	Protocol	Description
Ports 1, 2, 3, 4	RJ-45	10/100Base-T	Ethernet	Connection to the network
CONSOLE	DB-9	9600 bps	RS-232	Connection to the management computer. Provides access to the command line interface (CLI).

2 Connecting

Connect the FortiAnalyzer unit to a power outlet and to the network hub or switch.

- Place the FortiAnalyzer unit on a stable surface. It requires 1.5 inches (3.75 cm) clearance on each side to allow for cooling.
- Make sure the power is not plugged into the wall before connecting the power cable.
- The Status light flashes while the unit is starting up and remains lit when the system is up and running.

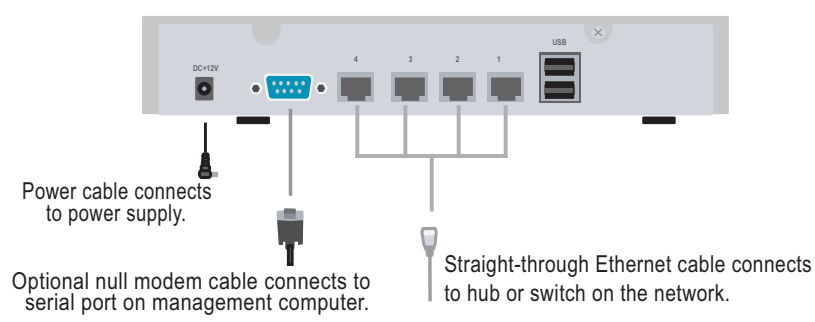


3 Planning the Configuration

You can add the FortiAnalyzer unit to your local FortiGate network to receive log messages from your local FortiGate units, or connect the FortiAnalyzer unit to the FortiGate units remotely using FortiManager. To connect the FortiAnalyzer unit to the FortiGate units remotely, you must configure the DNS server and the default gateway.

To manage the FortiAnalyzer unit, you can use a computer within the local network or over the Internet.

Factory Defaults

Administrator Account	User name:	admin
	Password:	(none)
Port 1	IP:	192.168.1.99
	Netmask:	255.255.255.0
	Management Access:	ping, https, http, ssh
Port 2	IP:	192.168.2.99
	Netmask:	255.255.255.0
	Management Access:	ping, https, http, ssh
Port 3	IP:	192.168.3.99
	Netmask:	255.255.255.0
	Management Access:	ping, https, http, ssh
Port 4	IP:	192.168.4.99
	Netmask:	255.255.255.0
	Management Access:	ping, https, http, ssh

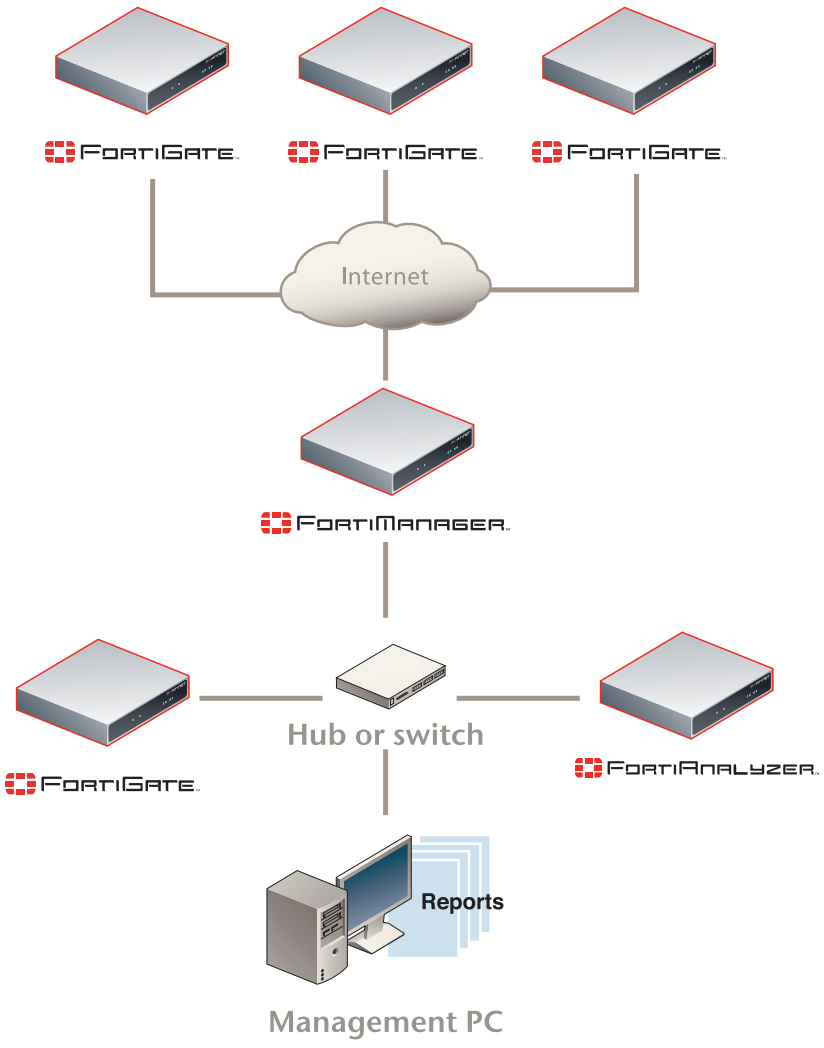

4 Choosing a Configuration Tool

Web-based manager

The FortiAnalyzer web-based manager is an easy to use management tool.
Use it to configure the administrator password, the interface and default gateway addresses, and the DNS server addresses.

Requirements:
- An Ethernet connection between the FortiAnalyzer unit and management computer.
- Internet Explorer 6.0 or higher on the management computer.

Command Line Interface (CLI)

The CLI is a full-featured management tool. Use it to configure the administrator password, the interface addresses, the default gateway address, and the DNS server addresses. To configure advanced settings, see the Tools and Documentation CD-ROM.

Requirements:
- A null modem serial connection between the FortiAnalyzer unit and management computer.
- A terminal emulation application (HyperTerminal for Windows) on the management computer.

5 Configuring the FortiAnalyzer Unit

Web-based Manager

Use the following procedure to connect to the web-based manager for the first time. Configuration changes made with the web-based manager are effective immediately without resetting the FortiAnalyzer unit or interrupting service.

To connect to the web-based manager

1. Connect the Port 1 interface of the FortiAnalyzer unit to Ethernet port of the management computer.
   Use a cross-over Ethernet cable to connect the devices directly. Use straight-through Ethernet cables to connect the devices through a hub or switch.
2. Configure the management computer to be on the same subnet as the FortiAnalyzer LAN interface.
   To do this, change the IP address of the management computer to 192.168.1.2 and the netmask to 255.255.255.0.
3. To access the FortiAnalyzer web-based manager, in your browser, go to https://192.168.1.99 (remember to include the “s” in https://).
4. Type `admin` in the Name field and select Login.

After connecting to the Web-based manager, you can configure the FortiAnalyzer unit IP address, DNS server IP address, and default gateway to connect the FortiAnalyzer unit to the network.

To configure interfaces

1. Go to **System > Network > Interface**.
2. Select the edit icon for each interface to configure.
3. Set the IP address and netmask for the interface.
4. Select OK.

To configure the Primary and Secondary DNS server IP addresses

1. Go to **System > Network > DNS**, enter the Primary and Secondary DNS IP addresses select Apply.

To configure a Default Gateway

1. Go to **System > Network > Routing** and select Create New.
2. Set Gateway to the Default Gateway IP address and select OK.

Command Line Interface

The FortiAnalyzer-100A/100B has serial port. Use the null modem cable to connect it to your management computer.

To connect to the FortiAnalyzer unit

1. Use a null modem cable to connect the FortiAnalyzer serial port to the management computer serial port.
2. Start a terminal emulation program (such as HyperTerminal) on the management computer. Use these settings: Baud Rate 9600, Data bits 8, Parity None, Stop bits 1, Flow Control None.
3. At the login: prompt, type `admin` and press Enter twice.
   (The login prompt is preceded by the server default host name.)

After connecting to the CLI, you can configure the FortiAnalyzer unit IP address, DNS server IP address, and default gateway to connect the FortiAnalyzer unit to the network.

To configure the FortiAnalyzer unit using the CLI

1. Set the IP address and netmask of the Port1 interface.
```
config system interface
    edit port1
         set ip <intf_ip>/<netmask_ip>
end
```

3. Configure the primary and secondary DNS server IP addresses.
```
config system dns
    set primary <dns-server_ip>
    set secondary <dns-server_ip>
end
```

4. Configure the default gateway.
```
config system route
    edit 1
        set device <interface>
        set dst <destination_ip>
        set gateway <gateway_ip>
end
```

Adding an administration password

By default, the admin user does not have a password. To restrict access to the FortiAnalyzer unit management account, add password for the admin user account.

To add the admin user account password

1. Go to **System > Admin**.
2. For the admin user, select the Change Password icon.
3. Enter a new password in the New Password box.
4. Reenter the password to Confirm Password box.
5. Select OK.

Adding an administration password using the CLI

To add an administration password in the CLI enter the following commands:

```
config system settings
   edit admin
     set password <password>
end
```

Shutting down the FortiAnalyzer unit

When powering off the FortiAnalyzer unit, always shut down the unit using the following procedures before disconnecting the power supply. Not following this procedure can increase the risk of damaging the FortiAnalyzer hard disk.

To power off the FortiAnalyzer unit

1. Go to **System > Dashboard**.
2. In the System Operation list, select Shut Down.
3. Select Go.
4. Once the indicates the shut down procedure has completed, disconnect the FortiAnalyzer unit from the power source.

Shutting down the FortiAnalyzer unit using the CLI

Enter the following command at the prompt:

```
execute shutdown
```

6 Completing the Configuration

Congratulations!

You have finished configuring the basic settings. You are ready to add FortiGate devices and collect log information. To explore the full range of configuration options, see the online help or the Tools and Documentation CD-ROM.

Visit these links for more information and documentation for your Fortinet product.

- Technical Documentation - http://docs.forticare.com
- Fortinet Knowledge Center - http://kc.forticare.com
- Fortinet Technical Support - http://support.fortinet.com